

# COMPANION

## OWNERS MANUAL

### LP GAS HEATER

Part No. COMP232



Gas Safety  
Certified

AS2568:2008  
SAI - 400167  
SAI Global

**OUTDOOR USE ONLY - DO NOT USE INDOORS**

**AUSTRALIA'S ORIGINAL OUTDOOR BRAND**

**IMPORTANT:** Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

## GENERAL WARNINGS

- This appliance shall only be used with the approved 1500mm Propane gas hose & regulator assembly supplied with the appliance and must be connected only to a Propane gas cylinder certified to AS2469 standards fitted with POL Connections only. It may be hazardous to attempt to fit other types of gas containers or cartridges. Do not fit other hose types.
- **IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CONTAINERS OR CARTRIDGES.**
- Ensure no trip hazard is present during operation.
- This appliance is to be stored in a dry & well ventilated location free from direct sunlight. Do not store when still connected to the cylinder. Make sure that the cylinder is disconnected and is stored in a well-ventilated area, free from direct sunlight, heat and ignition sources. If being stored indoors ensures that the location complies with the standard AS/NZS1596.
- This appliance must only be serviced by an authorised service agent, return to your place of purchase for service & repair.

## DANGER!

- This appliance is designed for **OUTDOOR USE ONLY – DO NOT USE INDOORS.**
- Do not use for domestic installations indoors.
- Do not remove the guard protecting the burner from this appliance.
- Do not use the appliance if it has a leak, worn, deteriorated or damaged seals.
- Inspect the Propane Gas hose regularly for signs of wear or damage, replace if found to be damaged.
- Handle with care even after brief use as some surfaces may become hot during operation; always allow the appliance to cool down before moving.
- Pick up using the handle only.
- Use only in well ventilated areas.
- The guard on the appliance will become extremely hot – **DO NOT TOUCH**
- This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.
- Do not use adaptors or modify appliance to fit other connectors or cylinders.
- When using this appliance children must be supervised by an adult at all times.
- Never leave appliance unattended when operating.
- Do not use as a cooking appliance or modify for any other reason.
- Do not hang or attempt to dry clothes or any flammable material on or placed near the appliance.
- Do not modify this appliance or remove any guards or covers.
- This appliance is not to be used in enclosed areas and must be operated away from any type of flammable material or liquid.



## CARBON MONOXIDE HAZARD

**THIS APPLIANCE CAN PRODUCE CARBON MONOXIDE WHICH HAS NO ODOUR. USING IT IN AN ENCLOSED SPACE (FOR EXAMPLE, CARAVAN, TENT, CAR, MOBILE HOME) MAY CAUSE DEATH.**

## IMPORTANT

 
 
- **OUTDOOR USE ONLY – ONLY USE IN WELL VENTILATED AREAS** The appliance must be used outdoors only and is to be operated no closer than 1000mm from the sides and 1000mm from above all combustible surfaces, fabrics and flammable materials. Must only be used on solid & stable horizontal surfaces made from non-combustible or non-flammable materials and should be protected from direct drafts and in a well-ventilated place.
- Keep clear of front of appliance.
- Use only in a sheltered position ensuring the appliance is not exposed to rain
- Caution: Accessible parts may be very hot. Keep young children away.
- Avoid twisting & kinking the Propane gas hose.
- If you smell gas immediately turn the gas off at the cylinder and move the appliance & cylinder to a well-ventilated area outside, keeping well away from sources of heat such as naked flames & pilot lights.
- Do not attempt to move or relocate the appliance when it is operating. Extinguish the burner & allow cool, disengaging the gas cylinder then moving the appliance.

## CHECKING FOR GAS LEAKS

- Check that all connections are tight and that the gas cylinder connection has been tightened before you turn the cylinder gas valve on.
- NEVER check for leaks with a flame or pilot light.
- Using soapy water coat all connections, if bubbles appear turn the cylinder gas control off and retighten the connection before re-testing.
- To check if gas remains in the cylinder, disconnect from the appliance and hold the cylinder in a vertical position then shake from side to side. If there is a sound or a feel of liquid movement inside the cylinder, the cylinder contains gas.
- When changing gas cylinders ensure this is conducted outside in a well-ventilated location free from people, animals & ignition sources such as naked flames, pilot lights & electrical equipment with heaters or elements.



## SAFETY INSTRUCTIONS

This appliance shall only be used in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.

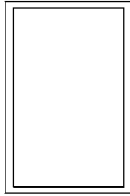
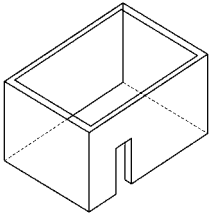


**Any enclosure in which the appliance is used shall comply with one of the following:**

  **(A)** An enclosure with walls on all sides, but with no overhead cover.

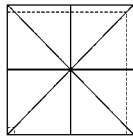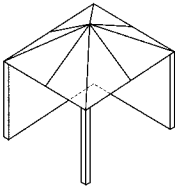

  **(B)** Within a partial enclosure that includes an overhead cover and no more than two walls.



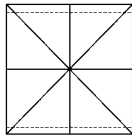
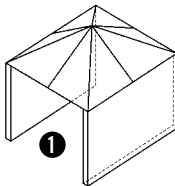


**(C)** Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply:

**(1)** At least 25% of the total wall area is completely open.


**(2)** 30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted.

    **(3)** In the case of balconies, 20% or more of the total wall area shall remain open and unrestricted.

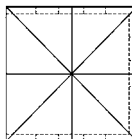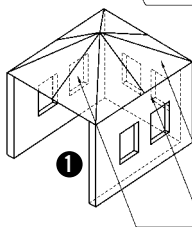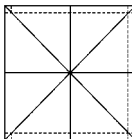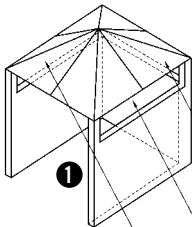

# OWNERS MANUAL
 
## UNDERSTANDING YOUR APPLIANCE

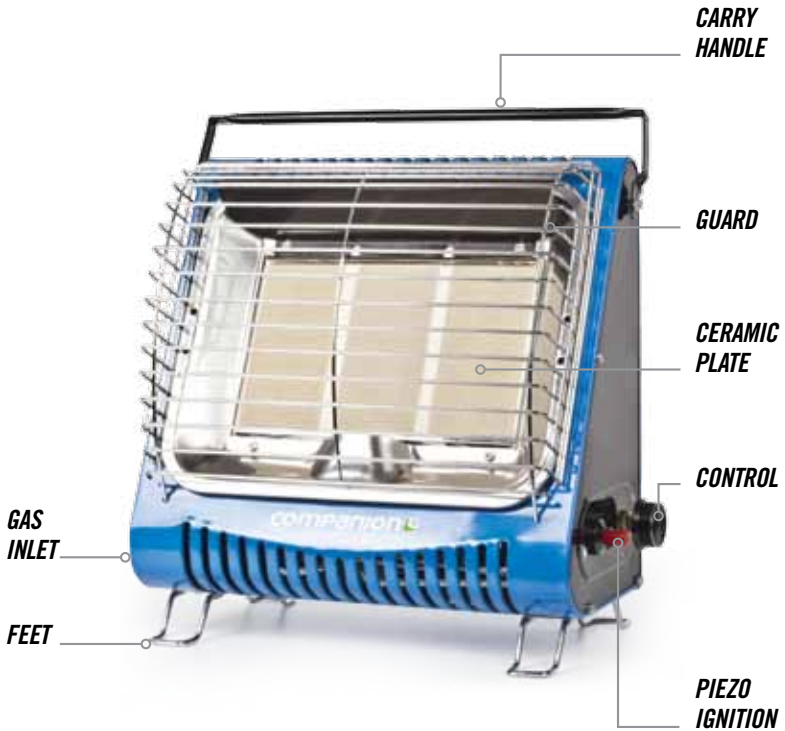

**POL REGULATOR  
AND 1500MM LPG HOSE**





## CONNECTION TO CYLINDER

- Step 1.** Locate the appliance on a firm horizontal and non-combustible surface.
- Step 2.** Check that the control on the appliance is in the ignite position.
- Step 3.** Connect to the cylinder with the supplied hose and regulator assembly.
- Step 4.** Tighten using a spanner.
- Step 5.** Turn the gas cylinder valve on in a clock wise direction and then check the connections for leaks with soapy water, if a leak is detected turn the cylinder off and re-tighten all connections and retest.





## LIGHTING THE HEATER

- Step 1.** Turn the gas cylinder "On"
- Step 2.** Check that the control is in the "Ignite" position and then depress and hold.
- Step 3.** Press the Piezo igniter to light the pilot flame and centre burner plate. Keep the gas control depressed for 10 to 15 seconds then release.
- Step 4.** If the Pilot light & burner does not ignite allow for any excess gas to disperse before trying to relight.



## ADJUSTING THE HEAT OUTPUT

- Step 1.** Slightly depress the control and turn in an anti-clockwise direction to the 🔥 the centre burner will remain in operation.
- Step 2.** Again slightly depress the control and turn in an anti-clockwise direction to the 🔥🔥 or 🔥🔥🔥 to ignite the remaining burners as required.

Do not attempt to move or relocate the appliance when it is operating. Extinguish the burner & allow cool, disengaging the gas cylinder then moving the appliance.



## TURNING THE APPLIANCE “OFF”

- Step 1.** Slightly depress the control and turn in a clock wise direction to the “Ignite” position, the single burner & pilot light will remain on.
- Step 2.** Turn the gas cylinder “off” and wait for the flame to extinguish

Note: Allow the appliance to remain off for a minimum of 5 minutes before relighting.



- Step 3.** Turn the gas cylinder valve off.



## TECHNICAL DETAILS

SPECIFICATIONS	
Part No.	COMP232
Dimensions:	363 x 353 x 170mm
Weight:	4.2Kg
Gas Jet:	0.56mm x 3
Consumption:	11.44Mj/Hr - 227G/Hr
Certificate:	SAI 400167

## CARE INSTRUCTIONS

Using warm soapy water with a mild detergent wipe down all surfaces and areas of the appliance, taking care not to allow water to enter the burner outlets.

DO NOT submerge the appliance in a sink or bowl.

DO NOT use abrasive cleaners or bleach.

## SERVICING

Inspect the appliance regularly for signs of wear, leaks or incorrect operation. If symptoms such as flaring of the burners, issues with lighting, damages to hoses or connections or leaks from seals or gas controls are identified do not attempt to repair, contact Customer Service on 1300 555 197.

**DO NOT ATTEMPT TO REPAIR OR MODIFY THE APPLIANCE**







Distributed by  
**Companion Brands**  
Bundoora Victoria 3083  
[www.companionbrands.com.au](http://www.companionbrands.com.au)